


G3YYD's 2Tone, Operational Information

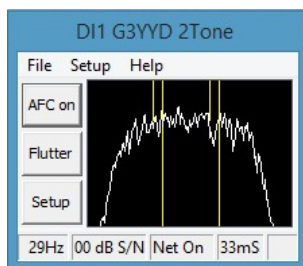

In Use

Top button: toggles AFC on/off.

Middle button: optimises the decoder for current signal propagation. Flutter for very rapid fading conditions; Selectiv(e) for when mark and space fade independently of each; Spread not common and more often on the higher HF bands on trans-polar paths - the signal spectrum is spread over a wider bandwidth by the propagation. **Setup button** displays the setup dialogue.

Spectrum display:

Tune the radio so the RTTY twin peaks and the short yellow (or white with AFC off) vertical tuning indicators are near or co-incident with the vertical yellow lines. The long vertical lines are at the set tone frequencies. The displayed band width can be adjusted, click on Setup button. The display is centred on the tone pair. It has a 60dB dynamic range and updates every 85 milliseconds. **Note** unlike MMTTY FFT the display frequency range is not changed by AFC (Automatic Frequency Control). If one of the tones suffers from QRM and the other does not, left click on the QRM'd tone will mute that tone and single tone copy will occur. To restore to both tones click in the middle of the two tones. Note when in single tone copy the AFC marker bar of the muted tone will also be muted.

Squelch:

Go to Menu Setup, Squelch left click will toggle on/off. Characters are displayed when the signal to noise is 2.5dB or higher. An occasional character will be displayed with a noise input. It takes a while after a signal goes before the output is squelched, this is deliberate to ensure nothing is missed in any replies. When squelched, 2Tone stores the last 4 characters. On squelch opening these characters are sent to the DI followed by newly received characters. Squelch can be disabled go to menu setup, uncheck squelch item.

AFC (Automatic Frequency Control) gives the best decode performance and will lock onto a signal within 60Hz of the set tones. The status bar - the numeric display along the bottom of the 2Tone window - left hand side shows the direction and value in Hz to tune the receiver to be exactly on frequency. In practice the receiver should be tuned to within 30Hz of the given signal. The AFC will lock onto a RTTY signal that is well below the decode threshold. The short vertical lines at the top of the FFT display shows where the AFC is compared to the set mark and space frequencies. AFC on is yellow while AFC off is White with the decoder tone frequencies unchanged from the set values. When transmitting 2Tone stops updating AFC preserving the AFC value for receive.

Signal to Noise ratio, next to the AFC value in the status bar is the measured signal to noise ratio of the decoded signal in dB. This is an average of S/N measured over several RTTY characters. The threshold to keep in mind is 10dB. Above this the error rate will be reasonable and as it drops below 10dB decode errors will increase very rapidly. Sometimes a seemingly strong signal has a poor signal to noise ratio due to some types of signal propagation. It is a good indicator of why a strong signal has poor decode. A poor quality transmit signal can also have a degraded signal to noise ratio.

NET: It is essential that the N1MM DI, Digital Interface, setup menu has "NET off/on with RUN change ticked". If this is ticked then clicking on the Entry Window's Running box will alter the Net status display in 2Tone's status bar. Unticked (S&P) = "Net ON", Ticked (RUN) = "Net OFF". At start of N1MM it may be out of sync just click on the Run box in the N1MM entry window twice to correct.

Baud Rate: This can be selected in Set up dialogue for 45.45 (normal standard for amateur RTTY), 50 or 75.

G3YYD's 2Tone, Operational Information

Stop Bit Length: On the status bar fourth in from the left is a display of the received stop bit length. Ideally this should be around 32 to 34 milliseconds. However some RTTY software differs from the 1.5 stop bit standard. Values around 44mS and 48mS are common in contest set ups, but do increase decode error rate. At low signal to noise ratios, this value will move either side of the transmitted value.

Receiver AGC: This should be set to slow as fast will confuse the selective fade algorithms and cause AGC generated IMD (Intermodulation Distortion). Normal SSB AGC setting is good but not CW fast setting.

TX Audio: As AFC is always on, the TX frequency has to track the RX frequency during S&P. The use of DOOK transmit audio is preferred as long as the transmitter is suitable for SSB. Ensure the audio input of the transmitter is not overdriven. Use of tone frequencies above 1500Hz is preferred so that audio harmonics are removed by the rig's SSB filters.

TX FSK: Using 2Tone FSK or TinyFSK/MORTTY/WinKeyer RTTY FSK or similar COM port to FSK adapters ensure 2Tone frequency setting are the same as rig's FSK settings. **Search & Pounce:** tune the rig so the small vertical AFC lines are co-incident with or very close to the long vertical lines. Not doing this will result in off frequency transmission.

TX FSK with Digikeyer II, microKEYER II, MK2R+ and micro2R (microHAM Router): Clearing the "Stuff" box tells Router (and the "keyer's" controller) that 2Tone will be directly driving the TxD interface line. Failure to do this will result in corrupted FSK. Also make sure that the USB root hub is not shared with other devices, e.g. wireless dongle, disk drive, etc.

RX Sound Card: Select the correct input and tune in a strong RTTY signal. Adjust the receiver and sound card gains so the peaks on the FFT (spectrum display) are about 90% of the maximum height of the display. The FFT has a degree of AGC (Automatic Gain Control) - the gain settings are not critical. Beware very cheap sound cards can create their own spurious QRM (I found this the hard way).

Display: 2Tone checks on start up that it is within the display area of your monitor(s), if it is not it will automatically centre itself on the nearest monitor. If the 2Tone window is not visible it is because it is either behind another window on the display or has been minimised. Going to Menu Setup, Top Most, checking this will put 2Tone on top.

SO2R: More than one 2Tone can be used at the same time by using separate folders for each 2Tone. By using one 2Tone for the left DI and in the Setup dialogue to use line in left and line out left for the left rig with another 2Tone for the right DI with line in right and line out right for the right rig. This is in conjunction with wiring the left rig to the left Line in/out and right rig with the right line in/out.

Play WAV file: This will read in a sound file that has been saved via the 2Tone command (see below) and play it at full PC speed through 2Tone. Just select the file to play and open it. Good idea to clear the Di window before playing. Use it for post contest analysis. It will play most .wav files.

Save Text: The decoded text can be saved to a file use menu File, Save Text. While saving text this menu item will be checked. To stop go again to File, Save Text and left click. The setting is lost when 2Tone is closed.

Save sound files: As long as the N1MM Logger.ini file is correctly set – see the N1MM install.pdf near the bottom of the first page – 2Tone can be set to save sound files on a per QSO basis. Go to File, save WAV File a dialogue box will open. Use Browse button to set the folder (or create the folder) where the .wav files will be saved. Set recording time before and after the QSO is logged (maximum of 30 seconds). Do this for RUN and also for SnP (Search & Pounce), smaller time values uses less disk space. Then OK. While working, the menu item is checked, click on the menu item to stop saving. File names are in the form YYYYMMDD HHMM SS BB CALL.wav, where YYYY=year, MM=month, DD=day, HH=hour, MM=minute, SS=second, BB=band in MHz, CALL=callsign of logged station. Example: 20130816 2036 39 14 M7T.wav. Saving will only occur for the parent Di. If using SO2R, i.e. Di1 and Di2 are used, and then need to set 2Tone for each Di. Different save folders for the two Dis can be used.

G3YYD's 2Tone, Operational Information

Technical Information

The sound card on transmit is set for 16bits at 12,000 samples per second at 45.45 baud and proportionally faster for 50 and 75 baud. The receive sample rate is 48,000 for all baud rates. On receive and transmit sound card channels are chosen in 2Tone setup for mono, left or right.

2Tone has been optimised to work with 45.45, 50 and 75 baud RTTY and has no other baud setting. Transmit is set for one start bit, 5 data bits and 1.5bit stop length. Bit timing accuracy is as accurate as the sound card sampling rate.

The receive tone filters used for Flat, Flutter and Selective use equalised raised cosine filters a bandwidth of baud rate in Hz. Spread decoder uses a raised cosine Beta=0.5 with twice the baud rate bandwidth. Spread decoder also uses a post detection filter with a bandwidth that varies with the measured signal to noise ratio.

The Selective decoder processes both tones separately using a threshold value derived from signal and noise averages with tone amplitude. The individual mark and space tone values are combined to produce a final mark or space result for asynchronous decoding. Unlike standard FSK mark/space determination this system makes use of the absence of signal as well as the presence of signal and by treating the two tones separately and combining them together single tone copy is possible. This is in-band frequency diversity.

On transmit is used to minimise occupied bandwidth. The start up sequence for AFSK/DOOK and 2Tone FSK is one character length (165ms at 45.45 baud) of space tone followed by one character length of mark tone and then a shift character appropriate to the following printable character. The start up sequence has been optimised for 2Tone type decoders (FLdigi RTTY mode uses a similar technique) and is suitable for MMTTY type decoders.

Configuration settings of 2Tone are stored in 2Tone.ini file in the same folder. If you delete this file programmed defaults will be used until you change them, which will then be stored in a new 2Tone.ini file. Corruption of this file can impact adversely on 2Tone.

More technical information on RTTY modulators and some of the history of technical developments can be found here: <http://w7ay.net/site/Technical/RTTY%20Demodulators>.

The saving of the sound .wav files makes use of N1MM network UDP broadcast function so that data on each QSO and the current Run/Search & Pounce state can be used. Editing the N1MM Logger.ini file adds port number 12061 and 12062. 12061 is used by 2Tone on Di1 and 12062 is used by another copy of 2Tone on Di2. For more information on UDP broadcast go to N1MM document link:

[External UDP Messages – N1MM Logger Plus \(hamdocs.com\)](#)

2Tone version control is YY.MMa. The “a” goes a, b, c etc for each up issue in the month. Example is 24.09a.

Peter Martinez, G3PLX was most helpful in guiding me on Windows and sound card programming. Rick Ellison, N2AMG help me overcoming a problem on the N1MM DI/MMTTY interface and Chen W7AY helped on Extended Nyquist filtering.

David, M7T & G3YYD@btinternet.com
25th September 2025